


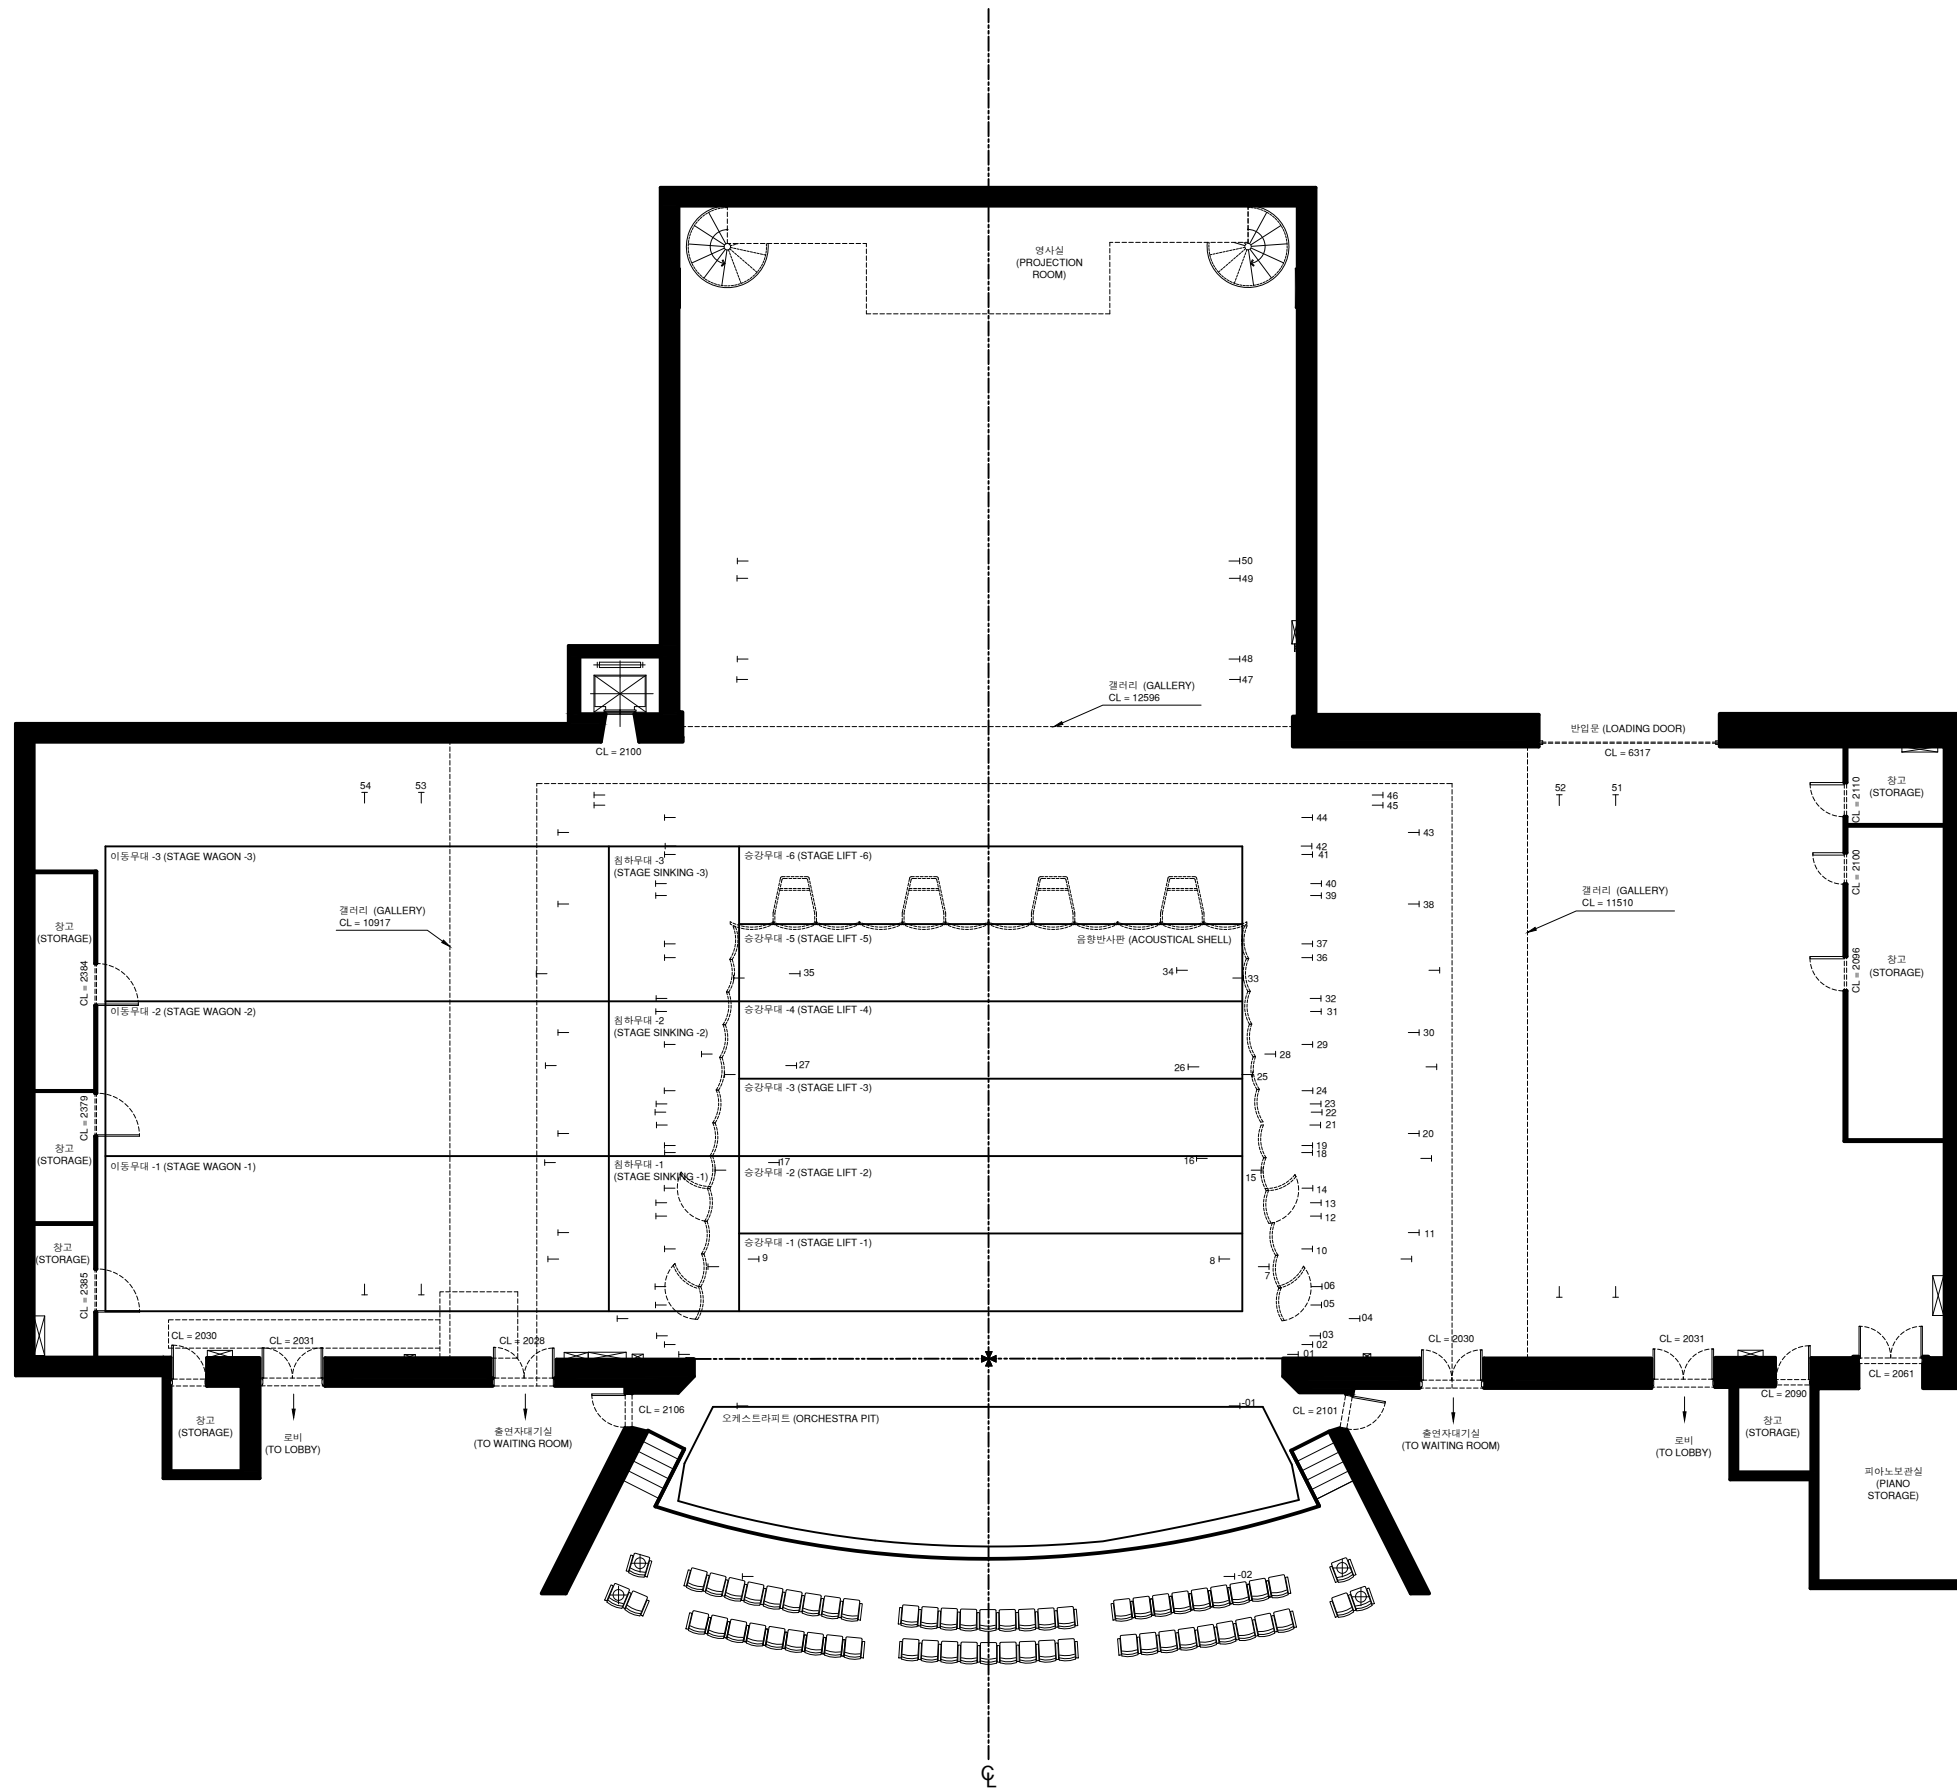

- 54. 측면 조명봉 4(#4 SIDE LIGHT BATTEN)
- 53. 측면 조명봉 3(#3 SIDE LIGHT BATTEN)
- 52. 측면 조명봉 2(#2 SIDE LIGHT BATTEN)
- 51. 측면 조명봉 1(#1 SIDE LIGHT BATTEN)
- 50. 뒷무대 장치봉 2(#2 REAR STAGE SET BATTEN)
- 49. 뒷무대 조명봉 2(#2 REAR STAGE LIGHT BATTEN)
- 48. 뒷무대 장치봉 1(#1 REAR STAGE SET BATTEN)
- 47. 뒷무대 조명봉 1(#1 REAR STAGE LIGHT BATTEN)
- 46. 하늘막 (CYCLODRAMA)
- 45. 암막 하늘막 (BLACK CYCLODRAMA)
- 44. 장치봉 16(#16 SET BATTEN)
- 43. 끝막 5 (#5 DRAW CURTAIN)
- 42. 하늘막상단조명 (UPPER CYC LIGHT)
- 41. 장치봉 15(#15 SET BATTEN)
- 40. 조명봉 5(#5 LIGHT BATTEN)
- 39. 장치봉 14(#14 SET BATTEN)
- 38. 끝막 4 (#4 DRAW CURTAIN)
- 37. 장치봉 13(#13 SET BATTEN)
- 36. 장치봉 12(#12 SET BATTEN)
- 34, 35. 측면음향반사판 7.8 (#7, #8 ACOUSTICAL SHELL-SIDE WALL)
- 33. 천장음향반사판 4(#4 ACOUSTICAL SHELL-CEILING)
- 32. 장치봉 11(#11 SET BATTEN)
- 31. 조명봉 4(#4 LIGHT BATTEN)
- 30. 끝막 3 (#3 DRAW CURTAIN)
- 29. 장치봉 10(#10 SET BATTEN)
- 28. 암시막 (SCREEN)
- 26, 27. 측면음향반사판 5.6 (#5, #6 ACOUSTICAL SHELL-SIDE WALL)
- 25. 천장음향반사판 5(#5 ACOUSTICAL SHELL-CEILING)
- 24. 장치봉 9(#9 SET BATTEN)
- 23. 장치봉 8(#8 SET BATTEN)
- 22. 조명봉 3(#3 LIGHT BATTEN)
- 21. 장치봉 7(#7 SET BATTEN)
- 20. 끝막 2 (#2 DRAW CURTAIN)
- 19. 장치봉 6(#6 SET BATTEN)
- 18. 장치봉 5(#5 SET BATTEN)
- 16, 17. 측면음향반사판 5.4 (#5, #4 ACOUSTICAL SHELL-SIDE WALL)
- 15. 천장음향반사판 2(#2 ACOUSTICAL SHELL-CEILING)
- 14. 장치봉 4(#4 SET BATTEN)
- 13. 장치봉 3(#3 SET BATTEN)
- 12. 조명봉 2(#2 LIGHT BATTEN)
- 11. 끝막 1 (#1 DRAW CURTAIN)
- 10. 장치봉 2(#2 SET BATTEN)
- 09, 09. 측면음향반사판 1.2 (#1, #2 ACOUSTICAL SHELL-SIDE WALL)
- 07. 천장음향반사판 1(#1 ACOUSTICAL SHELL-CEILING)
- 06. 조명봉 1(#1 LIGHT BATTEN)
- 05. 장치봉 1(#1 SET BATTEN)
- 04. 오페라커튼 (OPERA CURTAIN)
- 03. 막막 (MAIN CURTAIN)
- 02. 판수막 (PLACARD BATTEN)
- 01. 안전막 (SAFETY CURTAIN)
- 00. 영원선 (ZERO LINE)
- 01. 앞무대 조명 2 (#2 ARPN LIGHT)
- 02. 앞무대 조명 1 (#1 ARPN LIGHT)